



GROWATT 48V – GROWATT HOPE 3.3KWH

PRODUCTS

1 x Growatt 48V Inverter



1 x Growatt Hope 3.3Kwh



NOTES

CONNECTIONS

BEFORE SWITCHING THE BATTERY ON MAKE SURE THAT:

1. **TERMINAL BLOCKS ARE INSERTED ON THE LINK PORTS OF THE BATTERY. (LINK IN / LINK OUT)**
2. **THE COMMUNICATION CABLE IS INSERTED FROM PCS ON THE BATTERY TO BMS/CAN ON THE INVERTER.**
3. **POSITIVE AND NEGATIVE TERMINALS ARE CONNECTED TO THE BATTERY.**

SETTINGS

STEP 1

PRESS AND HOLD THE SWITCH ON BATTERY TO TURN IT ON.

STEP 2

TURN ON THE GROWATT INVERTER USING THE SWITCH BENEATH THE INVERTER.

STEP 3

STAND-BY FOR INVERTER TO ALLOW OUTPUT VOLTAGE WITH ONLY BATTERY AND INVERTER CONNECTED.

STEP 4

PRESS AND HOLD 'ENTER' FOR 2-3 SECONDS ON THE INVERTER SCREEN TO GO TO SETTINGS.

STEP 5

CLICK THE DOWN ARROW AND GO TO SETTING NO.5 'LI' AND PRESS ENTER

STEP 6

SELECTING 'LI' WILL AUTOMATICALLY TAKE YOU TO SETTING NO.36 PROTOCOL (PTCL) WHEREBY YOU WILL CHANGE IT TO 'L51' AND CLICK ENTER.

STEP 7

GO BACK TO THE MAIN SCREEN AND RESTART THE INVERTER USING THE SWITCH BENEATH.

